LIGHT MY BRICKS

LEGO® QUEER EYE THE FAB 5 LOFT #10291 LIGHT KIT

INSTALLATION GUIDE

Light My Bricks

LEGO® QUEER EYE THE FAB 5 LOFT 10291 INSTALLATION GUIDE

Hi There!

We're here to help you get started on the LEGO®

Queer Eye The Fab 5 Loft (10291) Light Kit.

This PDF details the instructions for the LED light kit only. If you are wishing to purchase this product, please click here to view the product page.

If you run into any issues, please refer to the troubleshooting section towards the end of this guide.

Have fun and enjoy!

PACKAGE CONTENTS:

8x White 30cm Bit Light
1x Warm 30cm Large Bit Light
3x White Strip Light

2x 6-Port Expansion Board
1x 2-Port Expansion Board
1x Dimmer Control Board 2PDIM V1

6x Adhesive Squares

3x 5cm Connecting Cable
3x 15cm Connecting Cable

1x USB Power Cable
(Power Source not Included)

ASSORTED BRICKS:

- 1x Plate 1x2 - Trans Clear
- 1x Plate 1x1 - Trans Clear
- 1x Tile 1x2 - Dark Grey
- 1x Tile 1x1 - Dark Grey
- 6x Round Plate 1x1 Open Stud - Black
- 5x Arm Skeleton, Bent with Clips (Horizontal Grip) - Black
- 10x Plate 1x1 Mod Rounded w Handle - Black

Contents

Before You Begin 5

Blueprint 8

Instructions 9

Final Product 32

Troubleshooting 33

Contact 38

Before You Begin

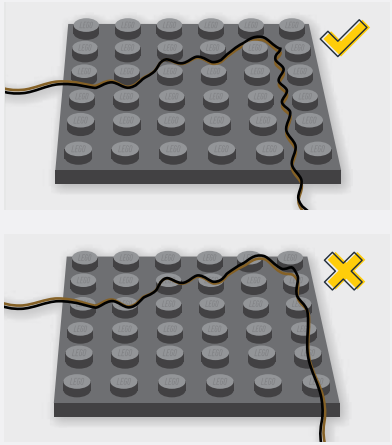

Laying cables in between and underneath bricks

Cables can fit in between and underneath LEGO® bricks, plates, and tiles providing they are laid correctly between the LEGO® studs. Do NOT forcefully join LEGO® together around cables; instead ensure they are laying comfortably in between each stud.

CAUTION: Forcing LEGO® to connect over a cable can result in damaging the cable and light.

Connecting Cable Connectors To Expansion Boards

Take extra care when inserting connectors to ports of Expansion Boards. Connectors can be inserted only one way. With the expansion board facing up, look for the soldered "=" symbol on the left side of the port. The connector side with the wires exposed should be facing toward the soldered "=" symbol as you insert into the port. If a plug won't fit easily into a port connector, do not force it.

Incorrectly inserting the connector can result in bent pins inside the port or possible overheating of the expansion board when connected.

Before You Begin

Connecting Cable Connectors To Strip Lights

Take extra care when inserting connectors to ports on the Strip Lights. Connectors can be inserted only one way. With the Strip Light facing up, ensure the side of the connector with the wires exposed is facing down. If a plug won't fit easily into a port connector, don't force it. Doing so will damage the plug and the connector.

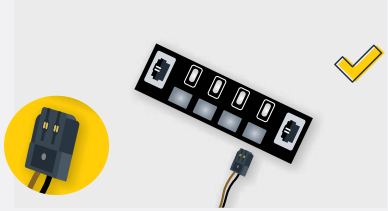

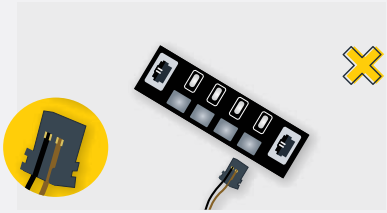

Connecting Micro Cable Connectors To Micro Expansion Board Ports

Take extra care when inserting the micro connectors to micro ports of Micro Expansion Boards. Connecting Micro Bit Lights to Micro Expansion Boards is similar to connecting lights and cables to Strip Lights. With the expansion board facing up, ensure the side of the connector with the wires exposed is facing down. If a plug won't fit easily into a port connector, do not force it. Use your fingernail to push the plastic part of the connector to the micro port.

Before You Begin

Installing Bit Lights Under Lego® Bricks And Plates

When installing Bit Lights under LEGO® pieces, ensure they are placed the correct way up (Yellow LED component exposed). You can either place them directly on top of LEGO® studs or in between.

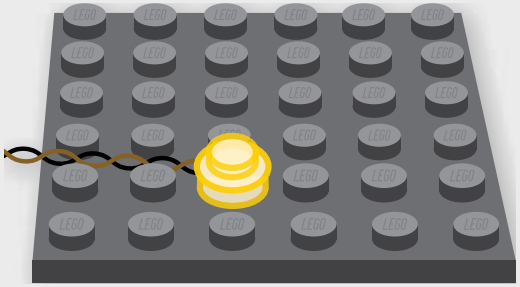

BLUEPRINT

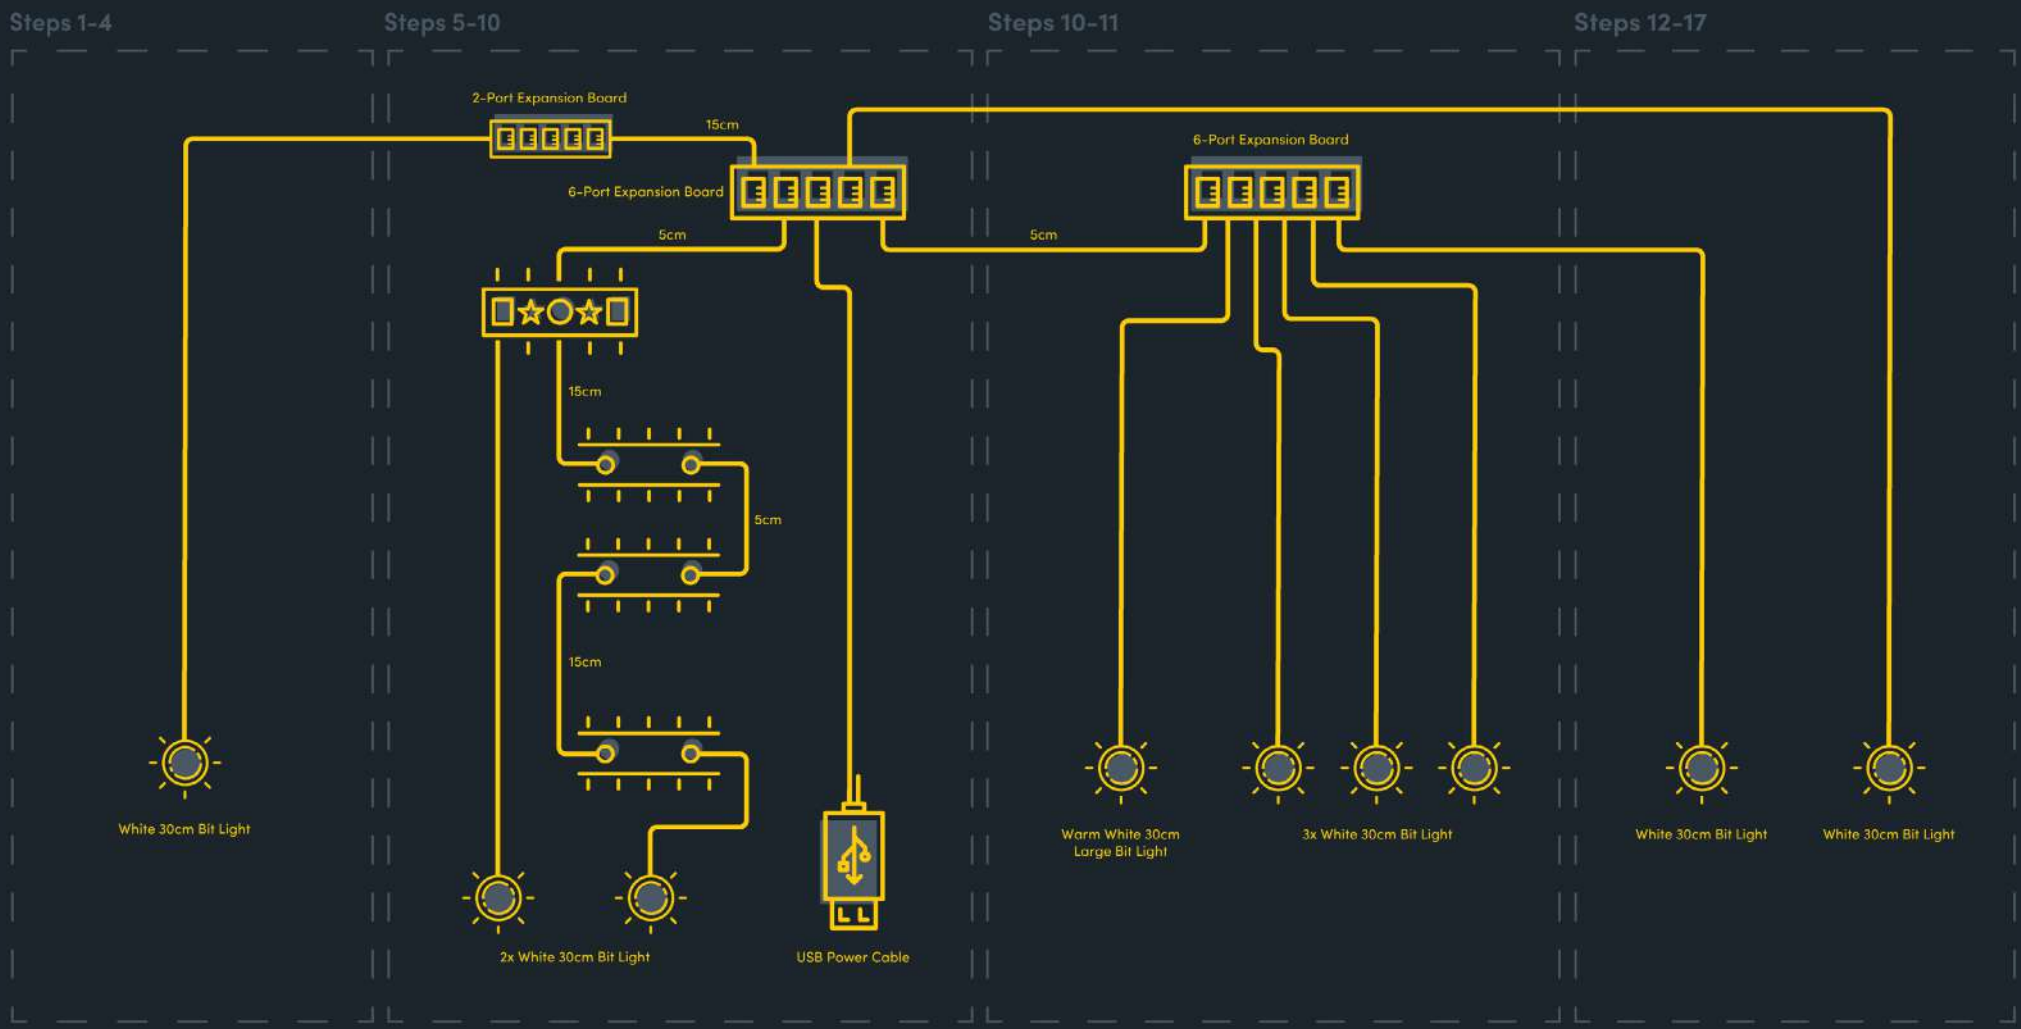
Steps 1-4
Steps 5-10
Steps 10-11
Steps 12-17
2-Port Expansion Board
15cm
6-Port Expansion Board
6-Port Expansion Board
5cm
5cm
15cm
5cm
15cm
White 30cm Bit Light
2x White 30cm Bit Light
USB Power Cable
Warm White 30cm Large Bit Light
3x White 30cm Bit Light
White 30cm Bit Light
White 30cm Bit Light

INSTRUCTIONS

To ensure a smooth installation of your light kit, please read and follow each step carefully. If you run into any issues, please refer to the online troubleshooting guide.

1

2

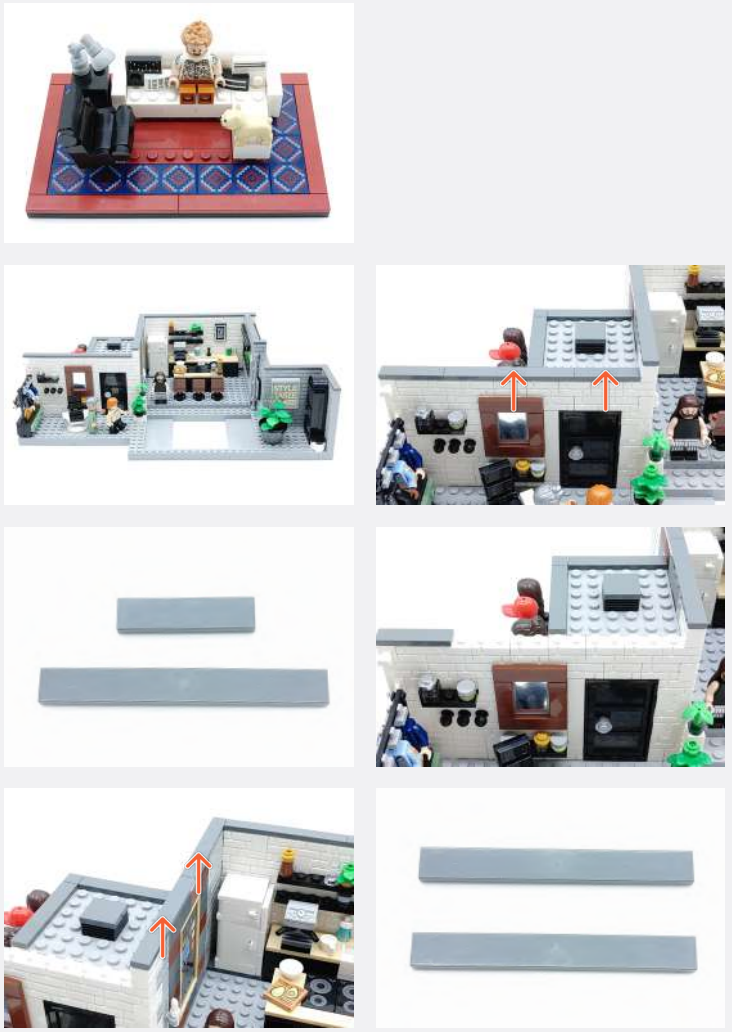

Legend — DISCONNECT · CONNECT / RECONNECT · TURN / FLIP · DIRECTIONAL · TWIST / BRAID · POWER ON TEST · NOTE ICON

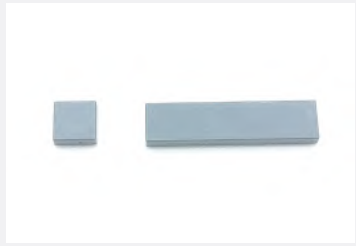

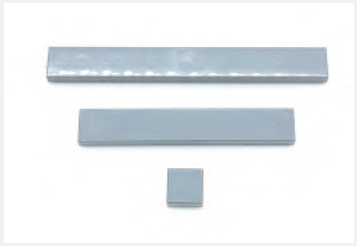

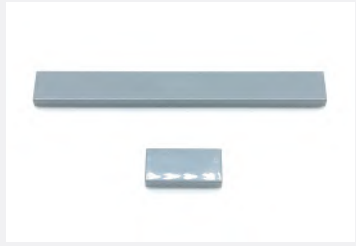

Legend → DISCONNECT → CONNECT / RECONNECT ↻ TURN / FLIP → DIRECTIONAL ⤢ TWIST / BRAID ✳ POWER ON TEST ✎ NOTE ICON

3

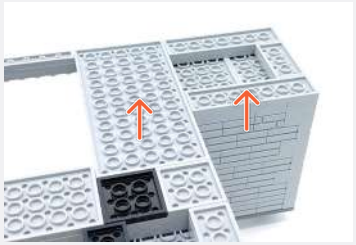

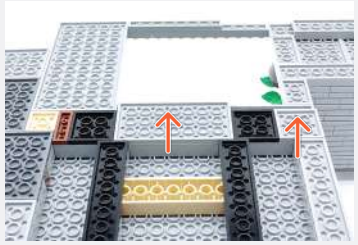

4

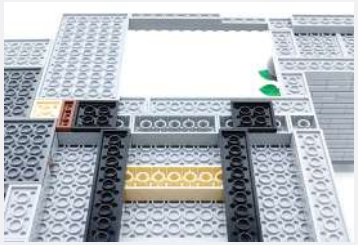
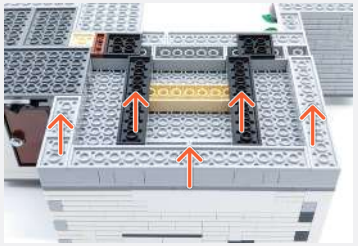
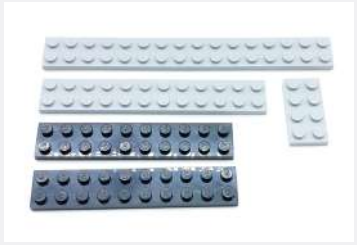

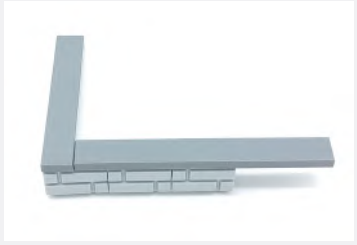

Legend → DISCONNECT → CONNECT / RECONNECT ↻ TURN / FLIP → DIRECTIONAL ⤢ TWIST / BRAID ✳ POWER ON TEST ✎ NOTE ICON

White Bit Light 30cm

Black Round Plate 1x1 w/ Open Stud

Black 1x1 Plate Modified Plate Rounded w/ Handle

Black Arm Skeleton, Bent w Clips (Horizontal Grips)

Legend → DISCONNECT → CONNECT / RECONNECT ↻ TURN / FLIP → DIRECTIONAL ⤢ TWIST / BRAID ✳ POWER ON TEST ✎ NOTE ICON

Black 1x1 Plate Modified Plate Rounded w/ Handle

Make 4 more spotlights to use for later in the kit

x5

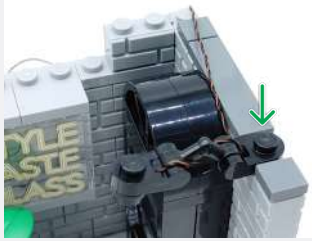

5

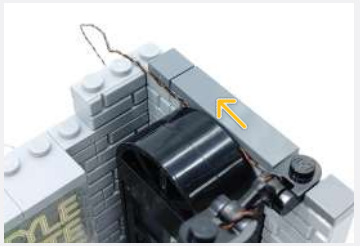

White Bit Light 30cm

Legend — DISCONNECT — CONNECT / RECONNECT — TURN / FLIP — DIRECTIONAL — TWIST / BRAID — POWER ON TEST — NOTE ICON

White Bit Light 30cm

6

Grab either of the Bit Lights from the neon sign step

White Strip Light

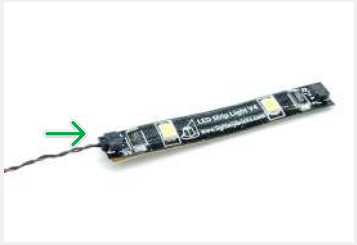

15cm Connecting Cable

Legend → DISCONNECT → CONNECT / RECONNECT ↻ TURN / FLIP → DIRECTIONAL ⤢ TWIST / BRAID ✳ POWER ON TEST ✎ NOTE ICON

7

White Strip Light

5cm Connecting Cable

White Strip Light

15cm Connecting Cable

Legend DISCONNECT · CONNECT / RECONNECT · TURN / FLIP · DIRECTIONAL · TWIST / BRAID · POWER ON TEST · NOTE ICON

8

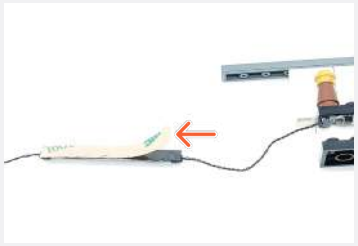

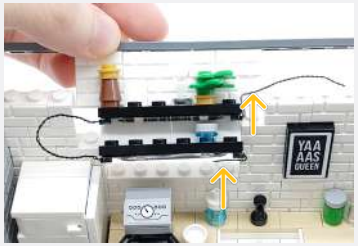

Legend → DISCONNECT → CONNECT / RECONNECT ↻ TURN / FLIP → DIRECTIONAL ⤢ TWIST / BRAID ✳ POWER ON TEST ✎ NOTE ICON

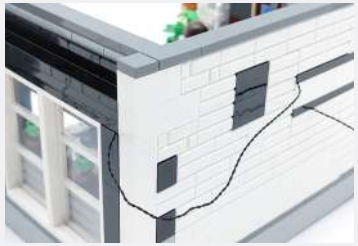

9

Connect the Bit Light Cable from the spotlight in step 4 to the 2-Port Expansion Board

2-Port Expansion Board

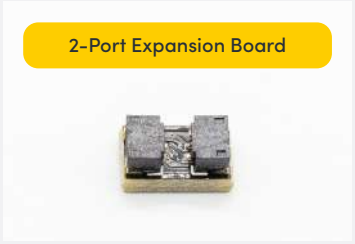

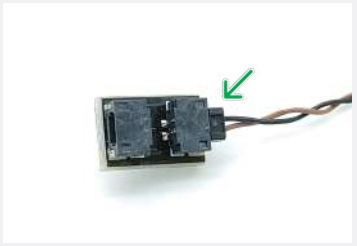

15cm Connecting Cable

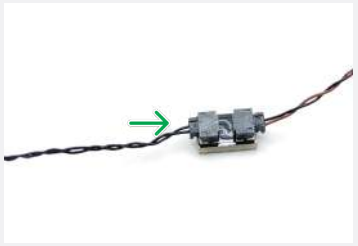
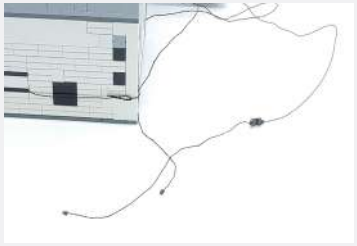

6-Port Expansion Board

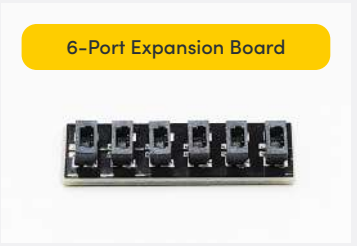

Grab the cable from the Bit Light used in the neon sign

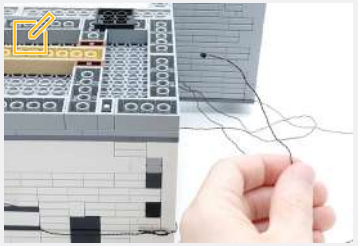

Legend — DISCONNECT — CONNECT / RECONNECT — TURN / FLIP — DIRECTIONAL — TWIST / BRAID — POWER ON TEST — NOTE ICON

Dimmer Control Board

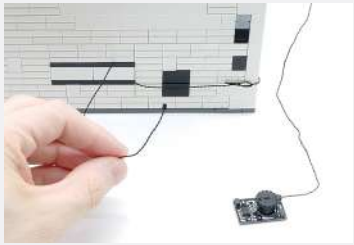

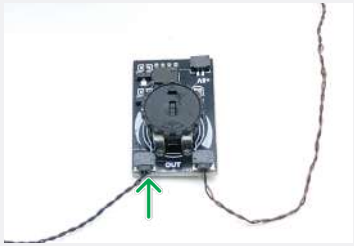

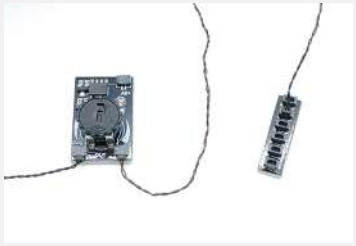

5cm Connecting Cable

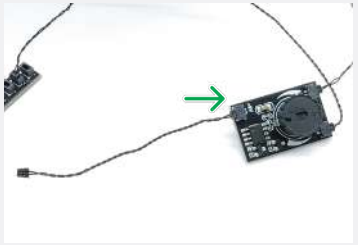

USB Power Cable

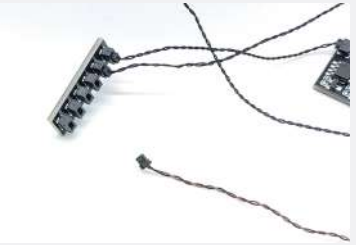

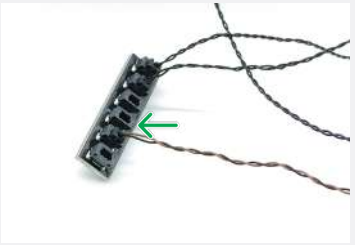

Legend → DISCONNECT → CONNECT / RECONNECT ↻ TURN / FLIP → DIRECTIONAL ⤢ TWIST / BRAID ✳ POWER ON TEST ✎ NOTE ICON

If you experience any issues with the lights not working and suspect an issue with a component, please try a different port on the expansion board to verify where the fault lies (with the light or expansion board). To correct any issues with expansion board ports, please view the section addressing expansion board issues in our troubleshooting section.

Ensure the Dimmer Control Board arrow on the knob is pointing in this direction to get the right brightness

Connect the other end to a USB Power Bank, USB Wall Adaptor, or USB to AA Battery Pack (sold separately)

10

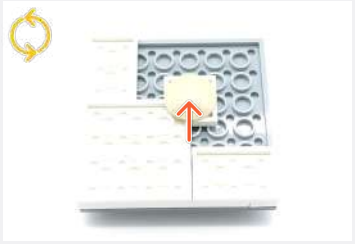

Warm White 30cm Large Bit Light

Plate 1x2 - Trans Clear

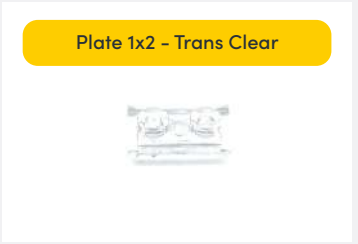

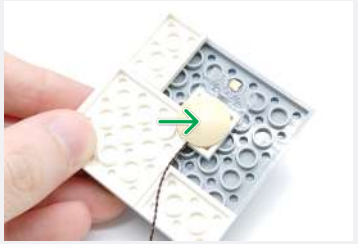

Legend — DISCONNECT — CONNECT / RECONNECT — TURN / FLIP — DIRECTIONAL — TWIST / BRAID — POWER ON TEST — NOTE ICON

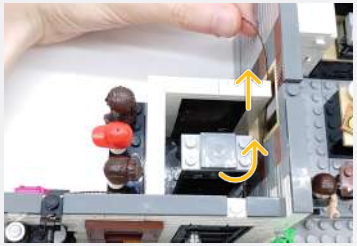

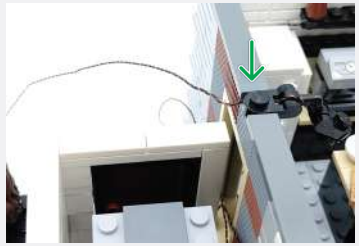
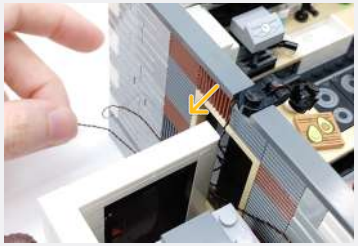

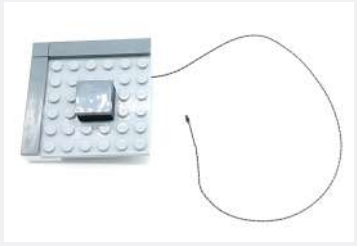
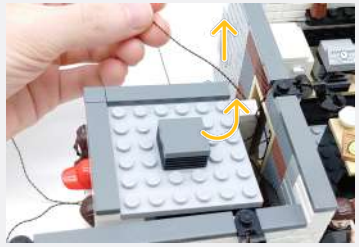

Legend → DISCONNECT → CONNECT / RECONNECT ↻ TURN / FLIP → DIRECTIONAL ⤢ TWIST / BRAID ✳ POWER ON TEST ✎ NOTE ICON

If you experience any issues with the lights not working and suspect an issue with a component, please try a different port on the expansion board to verify where the fault lies (with the light or expansion board). To correct any issues with expansion board ports, please view the section addressing expansion board issues in our troubleshooting section.

11

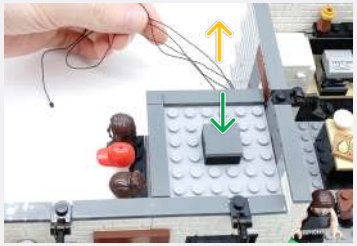

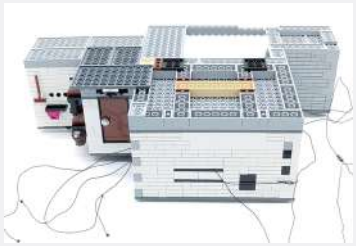

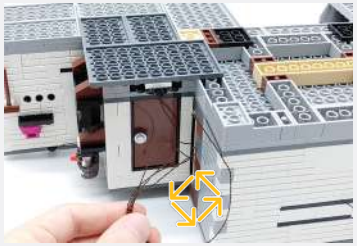

6-Port Expansion Board

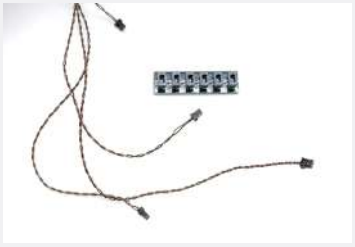

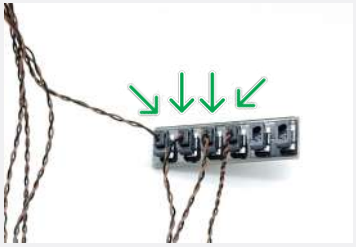

5cm Connecting Cable

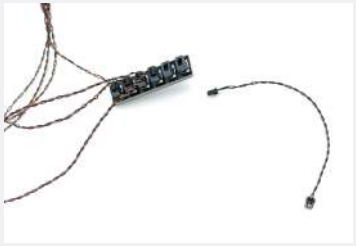

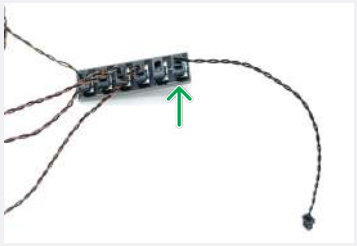

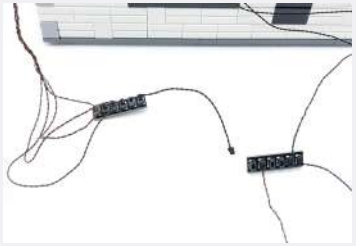

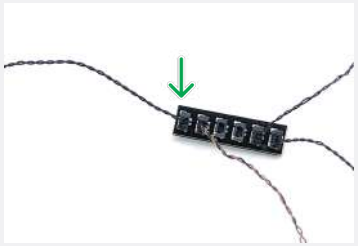

Legend → DISCONNECT → CONNECT / RECONNECT ↻ TURN / FLIP → DIRECTIONAL ⤢ TWIST / BRAID ✳ POWER ON TEST ✎ NOTE ICON

12

Black Round Plate 1x1 w/ Open Stud

13

Grab the cable from the spotlight you just installed

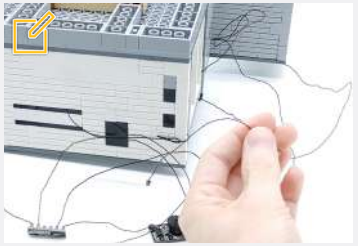

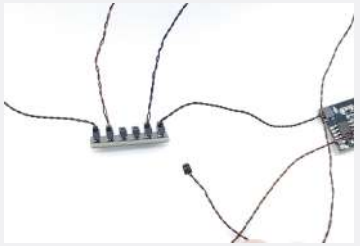

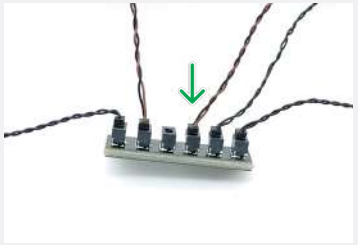

White Bit Light 30cm

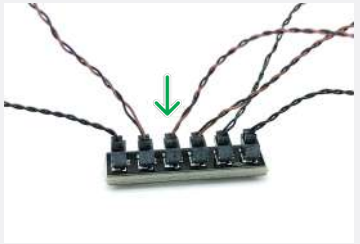

Legend — DISCONNECT — CONNECT / RECONNECT — TURN / FLIP — DIRECTIONAL — TWIST / BRAID — POWER ON TEST — NOTE ICON

14

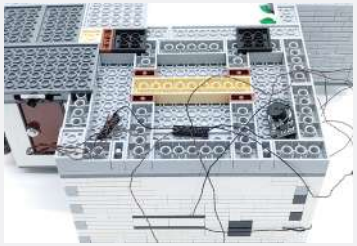
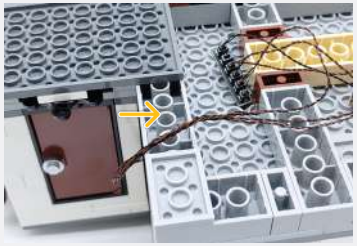

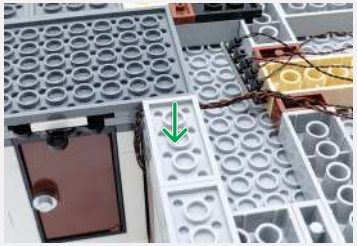

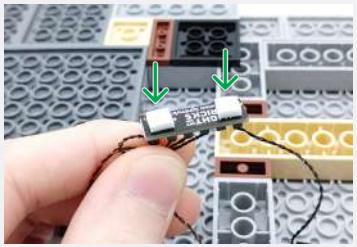
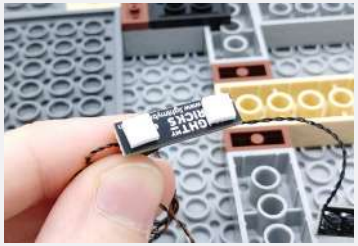
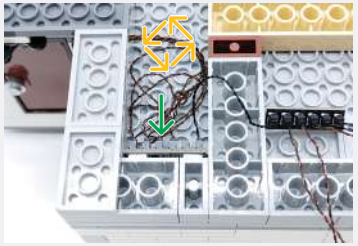
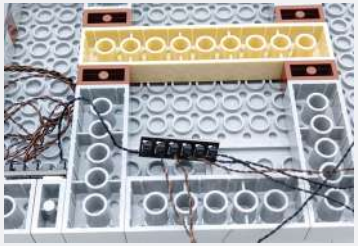

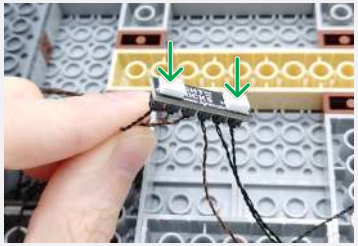
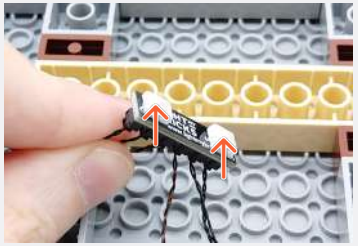
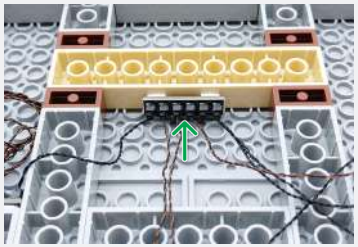
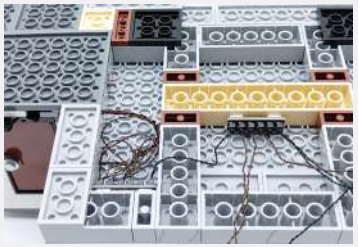

Legend → DISCONNECT → CONNECT / RECONNECT ↻ TURN / FLIP → DIRECTIONAL ⤢ TWIST / BRAID ✳ POWER ON TEST ✎ NOTE ICON

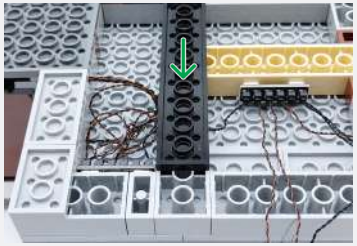
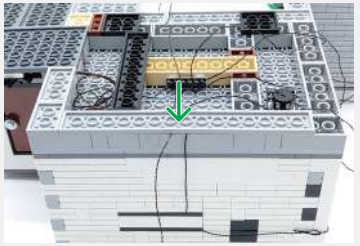

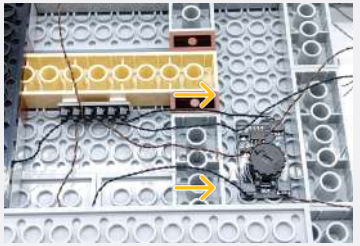

15

Grab the single Bit Light and move it out of the way

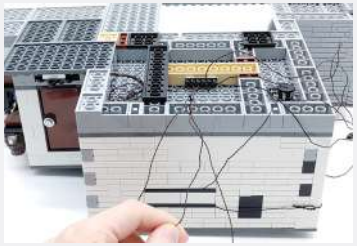
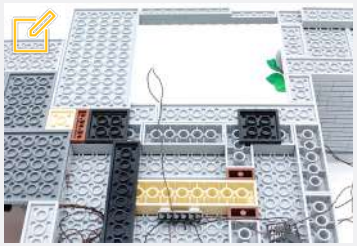

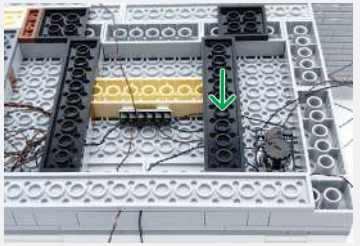

The left cable is the USB and the other is the kitchen lights from the wall

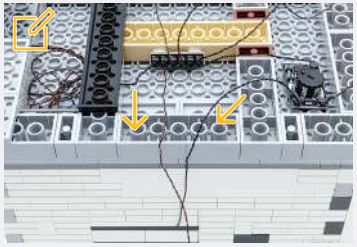

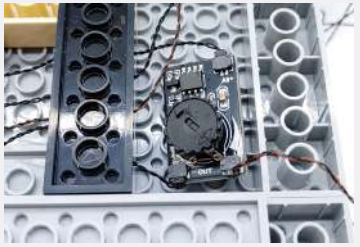

2x Adhesive Squares

Legend → DISCONNECT → CONNECT / RECONNECT ↻ TURN / FLIP → DIRECTIONAL ⤢ TWIST / BRAID ✳ POWER ON TEST ✎ NOTE ICON

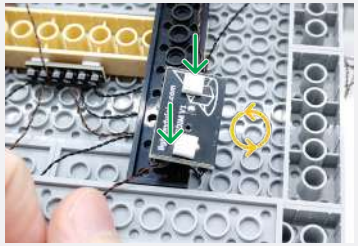
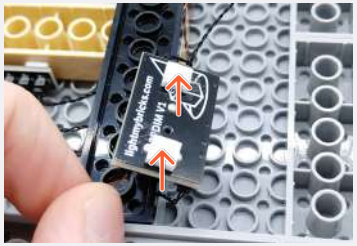
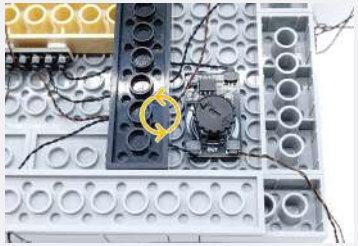
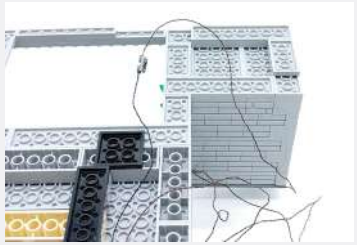
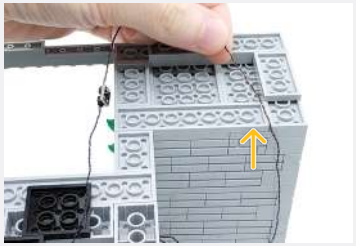

15

Grab the cable from the first installed spotlight

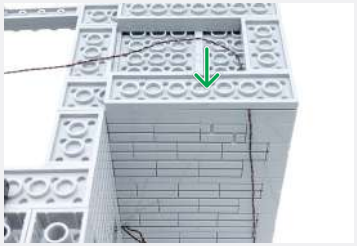
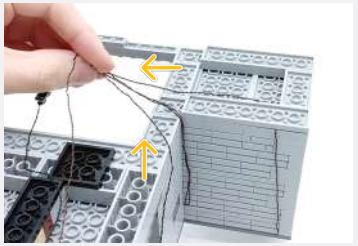
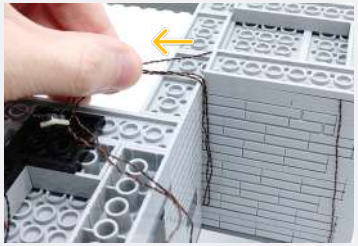
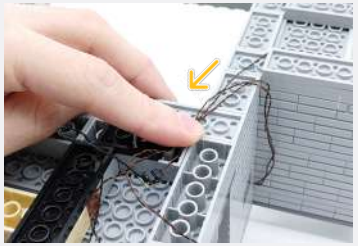

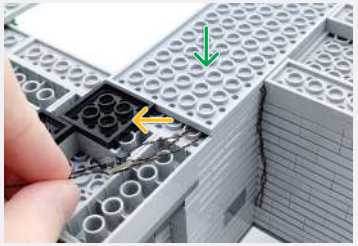

Grab the cable for the next spotlight and pull up the wall

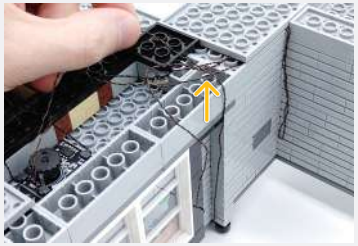

Legend → DISCONNECT → CONNECT / RECONNECT ↻ TURN / FLIP → DIRECTIONAL ⤢ TWIST / BRAID ✳ POWER ON TEST ✎ NOTE ICON

Grab the remaining loose cable down the wall

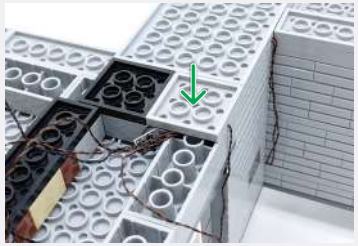
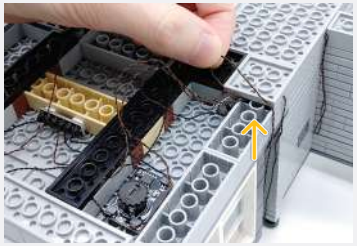

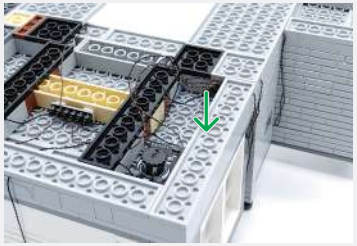
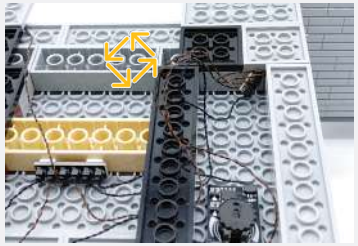
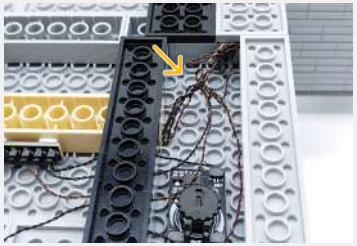

16

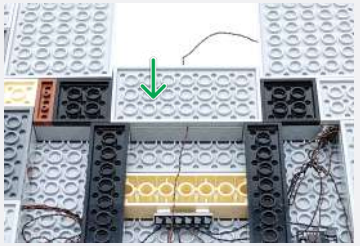
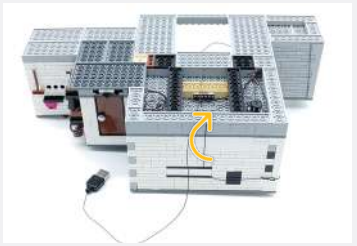

Grab the loose Bit Light from before

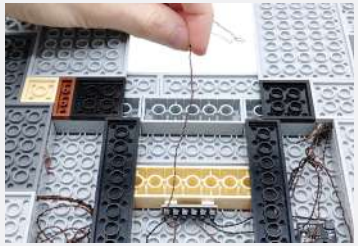

Legend → DISCONNECT → CONNECT / RECONNECT ↻ TURN / FLIP → DIRECTIONAL ⤢ TWIST / BRAID ✳ POWER ON TEST ✎ NOTE ICON

Round Plate 1x1 - Trans Clear

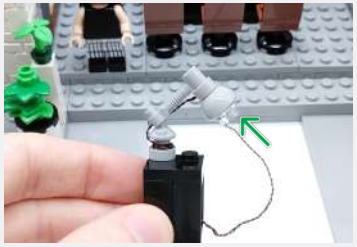

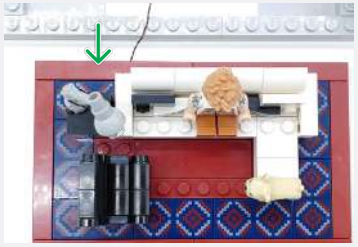

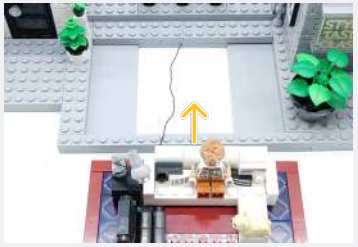

Legend → DISCONNECT → CONNECT / RECONNECT ↻ TURN / FLIP → DIRECTIONAL ⤢ TWIST / BRAID ✳ POWER ON TEST ✎ NOTE ICON

17

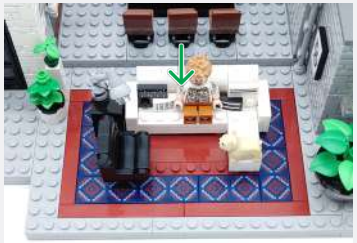

Legend → DISCONNECT → CONNECT / RECONNECT ↻ TURN / FLIP → DIRECTIONAL ⤢ TWIST / BRAID ✳ POWER ON TEST ✎ NOTE ICON

If you experience any issues with the lights not working and suspect an issue with a component, please try a different port on the expansion board to verify where the fault lies (with the light or expansion board). To correct any issues with expansion board ports, please view the section addressing expansion board issues in our troubleshooting section.

Connect the other end to a USB Power Bank or Adapter to complete installation of your light kit

Legend — DISCONNECT — CONNECT / RECONNECT — TURN / FLIP — DIRECTIONAL — TWIST / BRAID — POWER ON TEST — NOTE ICON

FINAL PRODUCT

This finally completes installation of the Light My Bricks

Queer Eye The Fab 5 Loft 10291 Light Kit.

TROUBLESHOOTING

Light My Bricks lighting kits contain individual components that are very small and can be easily damaged if not handled correctly.

To prevent unnecessary damage to components, we highly recommend that the User Guide section, **“Important things to note”** is read carefully. Follow the handling procedures in the User Guide to help prevent faults and damages to your Light My Bricks components.

If you are experiencing issues with your Light My Bricks set, watch our troubleshooting video here or read on for a list of common causes to help you troubleshoot.

Troubleshooting

Firstly, ensure that the batteries have power using a battery charge gauge.

If the batteries have no power, replace the batteries.

If the batteries still have power, check to see if the batteries have been inserted correctly into the battery pack.

Check For CR2032 Batteries Using The Flat Battery Pack

Inside the battery pack is a symbol indicating which side the (round) CR2032 battery should be inserted. Check that the “+” side of the battery pack has the battery with the “+” symbol facing downwards.

On the opposite side, the “-” side of the battery pack should have the battery flipped upside down, that is the “+” symbol facing upwards

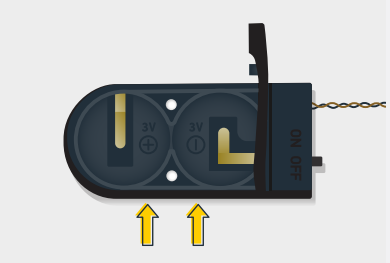

Troubleshooting

Check For Cr2032 Batteries Using The Round Battery Pack

Inside the battery pack is a symbol indicating which side the (round) CR2032 battery should be inserted. In this case, for the stacked battery pack, ensure that BOTH batteries have the “+” symbol facing upwards.

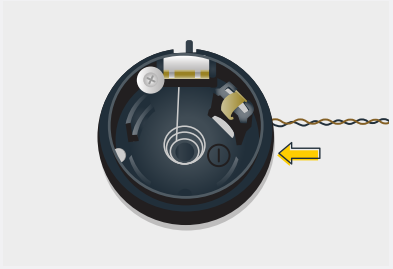

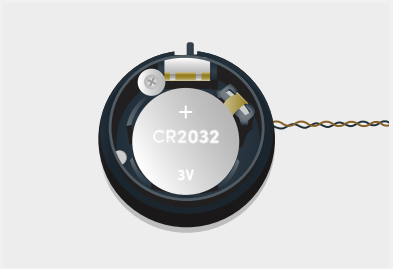

Check for AA batteries using the AA battery pack

Inside the battery pack are symbols indicating which direction the AA battery should be inserted. The flat side of the battery should be paired with the spring side of the battery pack.

If the batteries have been installed correctly and your kit still isn’t operating correctly, the next step is to check the wiring.

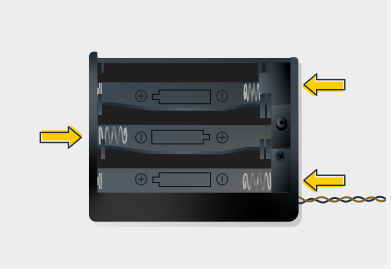

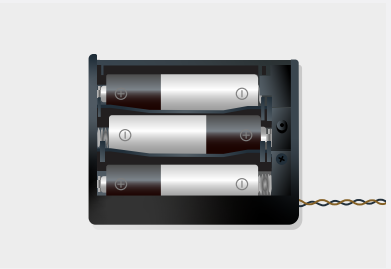

Troubleshooting

Check Your Wires

In order for Light My Bricks components to fit in between and underneath LEGO® bricks, the components need to be very small. Due to this nature, Light My Bricks components can be easily damaged when not handled correctly.

Be careful when removing unpacked components out of the packaging and ensure not to forcibly pull at the wires as this can damage the soldering that attach the wires to the LEDs.

If the wiring is detached from the LED itself, the light will not operate.

When connecting lights to your LEGO set, check that there are no pinched wires underneath or in between bricks and plates. When the wires are pinched and the exposed wires are touching each other, this can cause a crosswire and the lights to not function correctly.

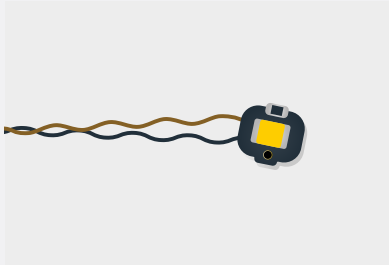

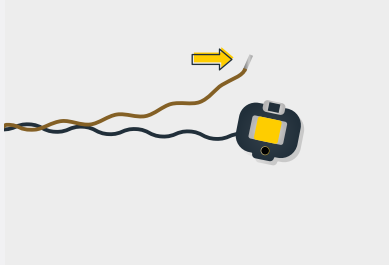

Troubleshooting

Check Your Expansion Board Ports/ Strip Light Ports / Effects Board Ports

It is important to note that connectors can only be inserted to the expansion board, strip light, or effects board ports in one direction.

Forcibly inserting connectors in the incorrect direction will result in damaging the pins inside each of the ports on your component board.

Not only will a light connected to the damaged port not work, but if the pins inside the port are bent to a point they are touching each other, this can result in all other lights in the system to stop working. This is a short circuit.

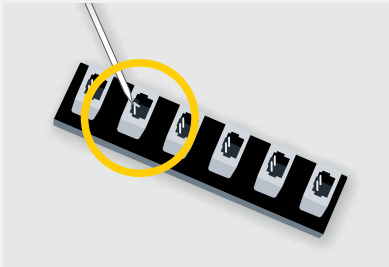

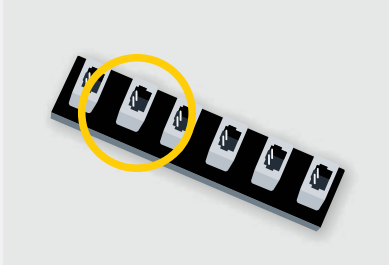

A short circuit can also result in overheating of the board, cable or batteries. If you suspect a short circuit, DISCONNECT POWER IMMEDIATELY Batteries can fail, catch fire, or even explode if left connected to a short circuit for too long.

If you suspect you have a faulty component due to a bent pin, try the following steps:

If you look carefully inside each of the ports, each port contains 2 small pins that should be straight. You will be able to identify a faulty port if it has any bent pins.

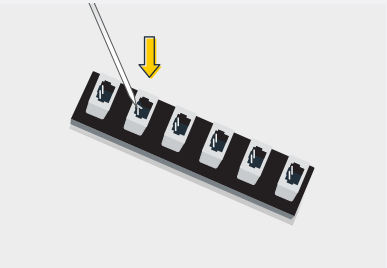

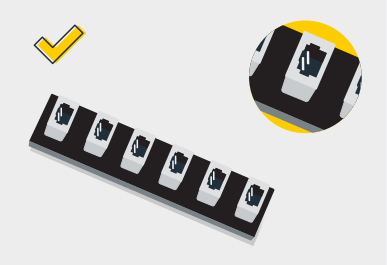

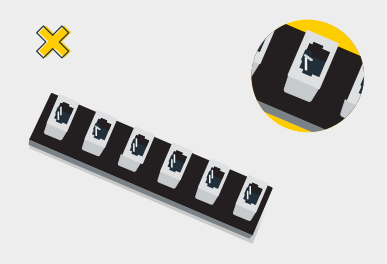

CONTACT US

If you have an enquiry regarding the online shop, our products or a general enquiry please refer to our Frequently Asked Questions webpage here. Alternatively, you can contact our Customer Services team by visiting our online support portal here.

support.lightmybricks.com

We thank you for purchasing this product and hope you enjoy!

lightmybricks.com